

DIGITAL TIMER INSTRUCTIONS

Mode 1 & 2: Manual stop: alarm is given at the end of a cycle. Press the front (green) button to stop. Cycle 1 can be cancelled midway by holding the front button, cycle 2 cannot be cancelled.

FRONT BUTTON				
TIME	START TIME	COUNTDOWN	COUNT UP	START TIME
BUZZER, BUTTON LED			ON	
BEACON LED (optional)			ON	

Mode 3: Relay marks each cycle by setting/resetting. Repeating cycle.

FRONT BUTTON				
TIME	START TIME	COUNTDOWN	START TIME	COUNTDOWN
BUZZER, BUTTON LED			ON	
BEACON LED (optional)			ON	
RELAY			SET (2 SEC.)	RESET

repeats...

Mode 4: Relay is alternately on for one cycle, off for the next. Repeating cycle.

FRONT BUTTON				
TIME	START TIME	COUNTDOWN	COUNTDOWN	COUNTDOWN
BUZZER, BUTTON LED			ON	
BEACON LED (optional)			ON	
RELAY		RESET	SET	RESET

repeats...

Mode 5 & 6: cycle ends automatically. Two second alarm is given at cycle end. Mode 6 can be cancelled by holding the green button - cycle 5 cannot.

FRONT BUTTON				
TIME	START TIME	COUNTDOWN	2 SECONDS	START TIME
BUZZER, BUTTON LED			ON	
BEACON LED (optional)			ON	
RELAY	RESET		SET	RESET

NOT PRESSED

Mode 7: Guard duty. Front button must be pressed before countdown time has elapsed otherwise an alarm is given. Repeating cycle never stops.

FRONT BUTTON				
TIME	CYCLE TIME	PART CYCLE	PART CYCLE	FULL CYCLE
BUZZER, BUTTON LED				ON
BEACON LED (optional)				ON
RELAY	RESET			SET

repeats...

NOT PRESSED