


# DHK-7 and DLK

## 1. CONNECT POWER

- Open the cover and snap the battery inside into the battery clip. Replace cover.
- On units powered by AC, plug in power.

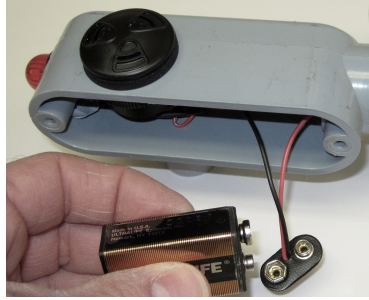

## 2. ADJUST DEPTH

Loosen the thumbscrew "collar" and slide the pipe to desired position.

## 3. BATTERY REMINDER

If battery powered, put a reminder on your PM program to replace the battery. As a guide, a single battery will provide 50 hours of continuous alarming and has a shelf life of 10 years. So, as a guide, if the unit alarms for a two minutes every day, replace the battery in 3 years.

## 4. MAINTENANCE

The guard around the float switch can be unscrewed to inspect or clean the float.



ADJUSTING DEPTH

Mar 15, 2013