

IBC - NO FEED PIPE (IHK, ILK)

1. POWER


Open the cover and snap the battery into the battery clip. For units powered by AC adapter, plug in the power jack.

2. MOUNT LID AND ADJUST DEPTH

After screwing the lid on your IBC tank, adjust the working depth. (by loosening the cord grip or thumbscrew.)

3. OPERATION

- Push button will test the circuit.
- Float guard may be removed to inspect/clean the float.

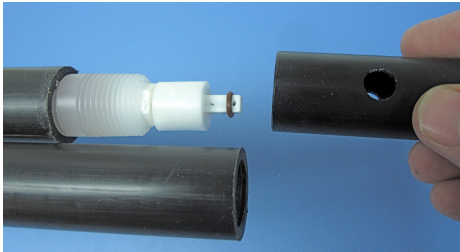

4. CREATE BATTERY REMINDER

Put a reminder on your PM program to replace the battery according to this chart. As a guide, a single ULtralife Lithium battery will provide 50 hours of continuous alarming.

ALARM FREQUENCY	REPLACEMENT INTERVAL
Several times daily	Yearly
Once a day	two years
Weekly	4 years
Rarely	10 years

Apr 19, 2012