


TANK ALARM - INTRINSICALLY SAFE

1. CONNECT INTERNAL CONNECTORS

The unit is shipped with the float switch and buzzer disconnected so it doesn't alarm during shipping. To put into service:

- Connect the float switch wires by plugging the green connector into the mating socket.
- Connect the buzzer quick-connector.
- Re-tighten the box screws.

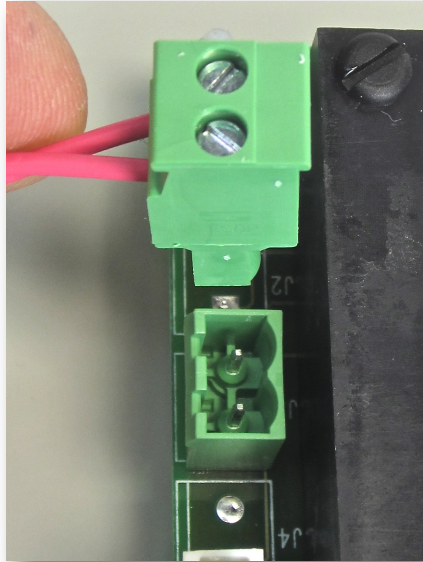

CONNECTING FLOAT SWITCH



CONNECTING THE BUZZER

2. MOUNT AND ADJUST DEPTH

3. BATTERY

- The battery capacity is 1350mA-hr which is about equivalent to 70 hours of continuous alarming.
- When the battery is low this is indicated by the Low Battery indicator light. The battery is not field replaceable.

4. OTHER POINTS

For tank alarms, the stainless steel float switch is reversible if needed. Simply remove retaining clip and reverse the float.

Jun 5, 2013