

T5 TIMER INSTRUCTIONS

1. CONNECT POWER

Plug the piggyback plug into a wall outlet.

2. SETTING THE TIME

The blue buttons on the side adjust the time up and down left of the colon. To program the digits right-of the colon, (usually seconds) hold down the green “stop/start” button for a second, and then adjust the blue buttons.



3. SELECTING PROGRAM



- Different modes are selected by removing the jumpers from the pins.
- JUMPER “A” on the pins selects minutes /seconds. For minutes/hours, remove jumper “A”.
- Other jumpers provide the logic according to this table:

MODE	JUMPER			DESCRIPTION
	B	C	D	
1	ON	ON	ON	MANUAL CYCLE STOP - CAN CANCEL ❖
2	OFF	ON	ON	MANUAL CYCLE STOP - CAN NOT CANCEL
3	ON	OFF	ON	REPEATING 2-SECOND PULSES
4	OFF	OFF	ON	ALTERNATING RELAY ON, THEN OFF CYCLES
5	ON	ON	OFF	AUTOMATIC CYCLE STOP - CAN CANCEL ❖
6	OFF	ON	OFF	AUTOMATIC CYCLE STOP - CAN NOT CANCEL
7	ON	OFF	OFF	CUSTOM
8	OFF	OFF	OFF	CUSTOM

❖ Certain cycles do not allow cancellation. If allowed, canceling a cycle is done by pressing and holding the green “stop/start” button for about 2 seconds. Display will flash the last reading to let you know the cycle has been cancelled.

3. OTHER POINTS

- The maximum current load is 15A at 120VAC, or 10A at 250VAC.
- Default wiring is Normally Open (so the relay closes and power is passed through the piggyback plug when timing). If the opposite is needed, move the power-cord pink wire into the Normally Closed terminal position.

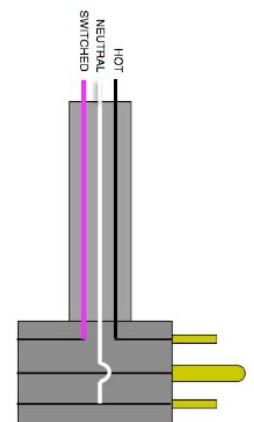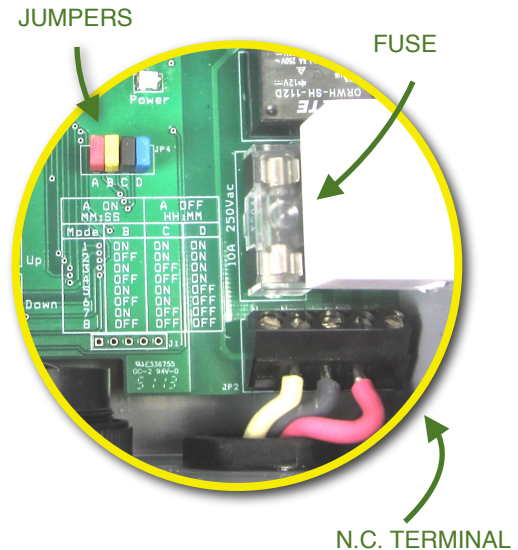

PIGGYBACK PLUG WIRING

Feb 20, 2014