


DHL-1 INSTRUCTIONS

1. CONNECT BATTERY



Open the cover and snap the battery into the battery clip. Replace cover. On units powered by AC adapter, plug in the power jack.

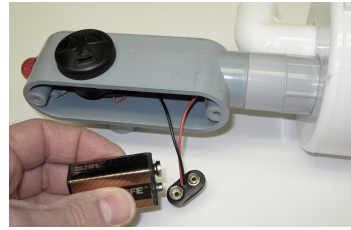

2. CONNECT TUBING

The JACO compression fitting will work on hard or soft tubing. Install as follows:

- Cut tubing squarely. (Remove burrs if hard tubing)
- Insert tubing through the nut all the way to the back.
- Turn the nut hand tight.

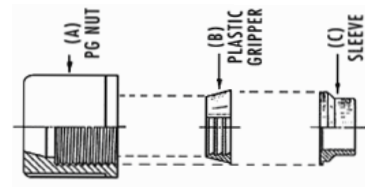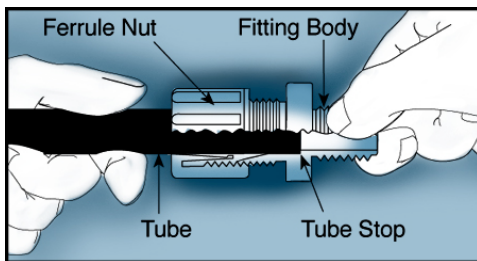

If it is necessary to replace the fitting with a different size, screw the replacement teflon-taped fitting only one turn past hand tight.


3. BATTERY REMINDER

Put a reminder on your PM program to replace the battery according to this chart. As a guide, a single battery will provide 50 hours of continuous alarming and has a shelf life of 10 years.

ALARM FREQUENCY	REPLACEMENT TIME
Several times daily	Yearly
Once a day	two years
Weekly	4 years
Monthly	6 years
Never	10 years

NOTES:

The bottom screen is removable for inspection of the float.

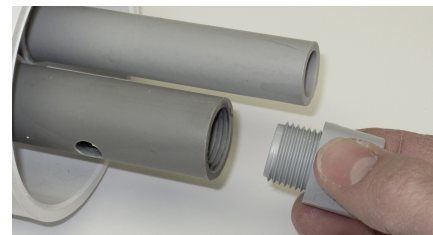

Jan 3, 2012